

Meter Offset

Features


- High tensile and impact strength
- An offset is needed to move the path of the conduit away from a wall into the holes of an electrical meter box

Applications

- Use to connect a conduit to a meter box

Standard Material

- PVC

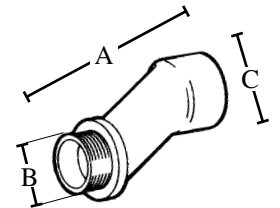

Catalog Number	UPC	Size	Ship Case	Weight/Case	A	Inches B	C
1094	23116	1-1/4"	15	3	3.50	1.625	2.00
1096	23117	2"	8	2	3.50	2.3125	2.1875